

## Repair Instructions

### Engine Oil and Filter Change

S6RW0C1506008


#### **▲ WARNING**

- **New and used engine oil can be hazardous.**  
Be sure to read “WARNING” in “General Precautions in Section 00” and observe what is written there.
- **Step 1) – 7) outlined below must be performed with ENGINE NOT RUNNING. For Step 8), be sure to have adequate ventilation while engine is running.**

Use only engine oil of SG, SH, SJ, SL or SM grade. Select the appropriate oil viscosity according to the chart [A].

It is highly recommended to use SAE 5W-30 oil. However, SAE 10W-30 oil is usable for ambient temperatures above – 18 °C (0 °F).

[A]

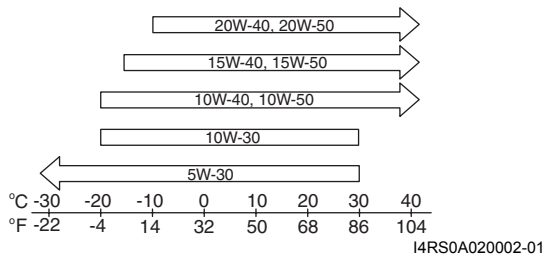

Before draining engine oil, check engine for oil leakage. If any evidence of leakage is found, make sure to correct defective part before proceeding to the following work.

- 1) Remove right side engine under cover.
- 2) Drain engine oil by removing drain plug.
- 3) After draining oil, wipe drain plug clean. Reinstall drain plug.


#### **Tightening torque**

**Engine oil drain plug (a): 35 N·m (3.5 kgf-m, 25.5 lb-ft)**

- 4) Loosen oil filter by using oil filter wrench (special tool).

#### **Special tool**


**(A): 09915-40611**

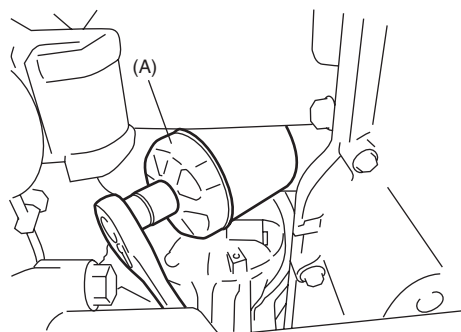

I5JB0A020020-01

#### **NOTE**

**Before fitting new oil filter, be sure to oil its O-ring. Use engine oil for this purpose.**

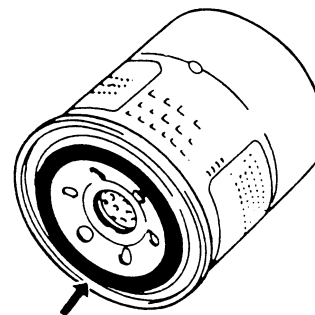

IYSQ01020009-01